

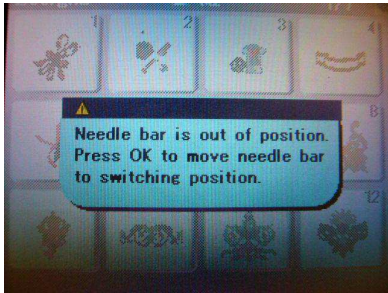
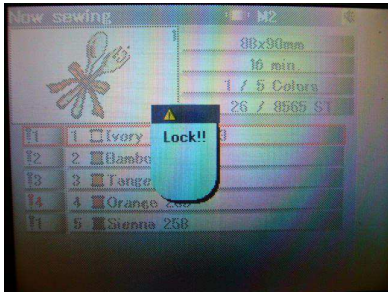
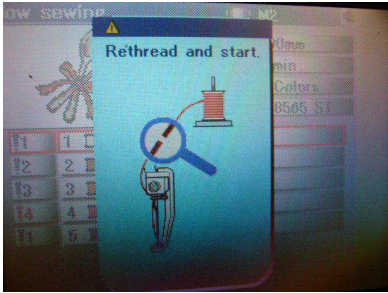

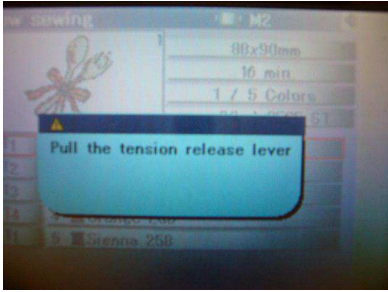


List of error messages of the MB-4

October 31, 2006

Item	LCD on MB-4	Malfunction	LCD on RCS
1	[E:00]	Communication with RCS	Screen does not go to the next step from the "Welcome Screen".
2	[E:01]	Stepping motor initializing	
3	[E:02]	Needle bar change over	
4	[E:03]	Needle bar change over phase	
5	[E:04]	Driving motor overloaded	

Item	LCD on MB-4	Malfunction	LCD on RCS
6	[E:05]	Needle thread breakage	
7	[E:06]	* To be deleted.	
8	[E:07]	Thread cutter function	
9	[E:08]	Thread tension disc released	
10	[E:09]	Driving motor function	